


INSTALLING THE HANGER BOLT

Drill hole 125mm [5"] deep, using a 5.2mm [¹/₈"] drill bit.


Screw M8 hanger bolt into wood structure.

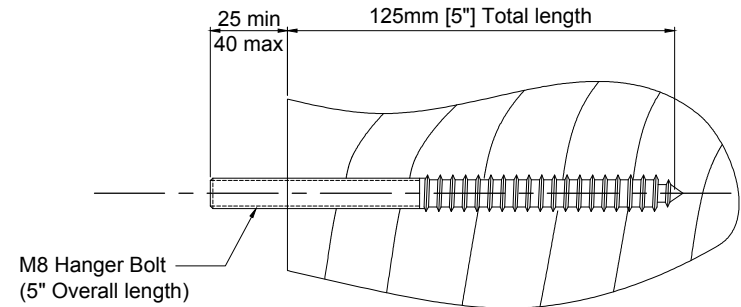

INSTALLING HANDRAIL FITTING


Remove the endcap BA2-P10. Secure handrail fitting with the socket capnut using a 8mm Allen key.

(Same Allen key as for 3/8"-16 socket cap screw).

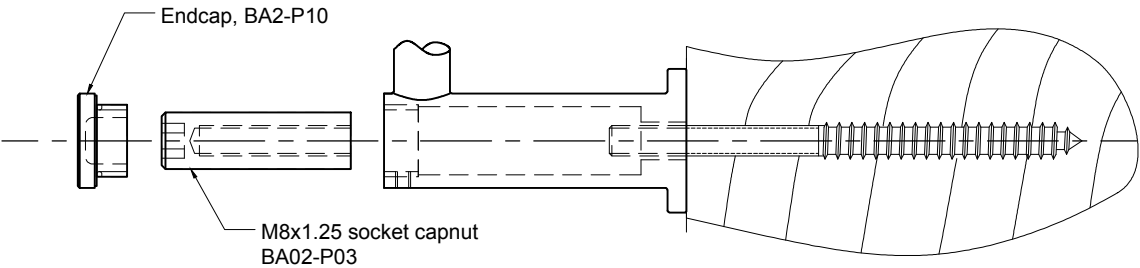

CLOSE FITTING

Turn endcap BA2-P10 back into the front of the fitting. Tighten the M4 set screw at the bottom to secure the cap.

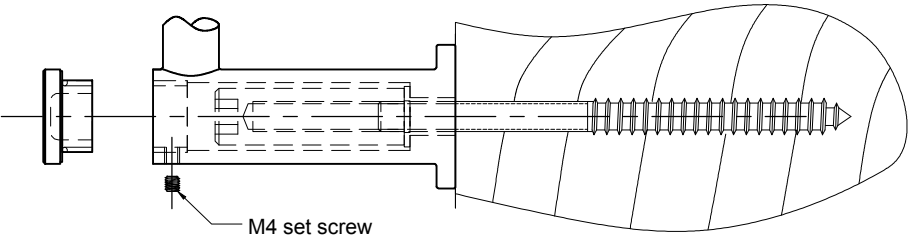

Disclaimer:
These instructions provide guidance for installation only. They do not constitute suitability for application, which should be provided by a registered Engineer.

Hole in glass: See above
Dimensions millimeter unless otherwise shown. Apply loctite 243 to all threads during assembly (To increase curing speed, please apply activator 7649)

INSTALLATION INSTRUCTION
HANDRAIL FITTING WALL MOUNTED INTO WOOD
BA382-W

Drawn	Drawn date
MT	JUL 08-2020
Approved	Approved date
JS	JUL 08-2020
Scale	Rev.
1:2	-
DWG No	
BA382-W-IM	

**stella**

[t] (604) 231 5892
[f] (604) 231 5893
[e] info@stellaglasshardware.com